



**356 Pre-A**



**356 A**



**356B T5**



**356B T6**



**356C**



*Show me  
Classic Parts*

# PORSCHE 356 CATALOG

# INDEX

We are committed to your full satisfaction and strive to provide you with a easy and care free shopping experience. To find what you've been looking for use our catalog index.

<a href="#"><u>New Arrival</u></a>	<a href="#"><u>Page 3</u></a>
<a href="#"><u>Porsche 356 PRE-A(50-55)</u></a>	<a href="#"><u>Page 5</u></a>
<a href="#"><u>Porsche 356A (56-59)</u></a>	<a href="#"><u>Page 7</u></a>
<a href="#"><u>Porsche 356BT5 (60-61)</u></a>	<a href="#"><u>Page 10</u></a>
<a href="#"><u>Porsche 356BT6 (62-63)</u></a>	<a href="#"><u>Page 13</u></a>
<a href="#"><u>Porsche 356C (64-65)</u></a>	<a href="#"><u>Page 16</u></a>

# New Arrival

1964-1965 Porsche 356C  
Brake Fluid Reservoir



OEM #: 69535501300;  
\*PS9303

1956-1965 Porsche 356 Tail  
Light Assembly RH  
(Red/Amber, Euro Type)



OEM #: 64463140410;  
\*PE8621

1956-1965 Porsche 356 Tail  
Light Assembly LH  
(Red/Amber, Euro Type)



OEM #: 64463140301;  
\*PE8622

1956-1965 Porsche 356 Tail  
Light Lens RH (Red/Amber,  
Euro Type)



OEM #: 64463142210;  
\*PE8623

1956-1965 Porsche 356 Tail  
Light Lens LH (Red/Amber,  
Euro Type)



OEM #: 64463142110;  
\*PE8624

1956-1965 Porsche 356 Tail  
Light Assembly RH (Red, US  
Type)



OEM #: 64463140300;  
\*PE8601

1956-1965 Porsche 356 Tail  
Light Assembly RH (Red, US  
Type)




OEM #: 64463140400;  
\*PE8602

1950-1965 Porsche 356  
Steering Wheel Black Banjo  
Style




OEM #: N/A;  
\*PEA004

1950-1965 Porsche 356  
Steering Wheel Ivory Banjo  
Style

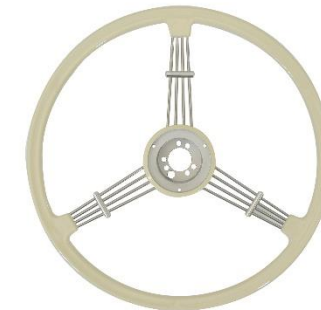

OEM #: N/A;  
\*PEA005


1950-1965 Porsche 356 Valve  
Cover wo Vent

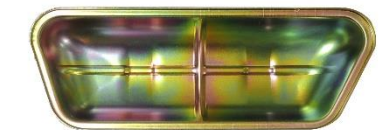

OEM #: 59710430500;  
\*PE9701

# New Arrival

1950-1965 Porsche 356 Valve  
Cover w/ Vent

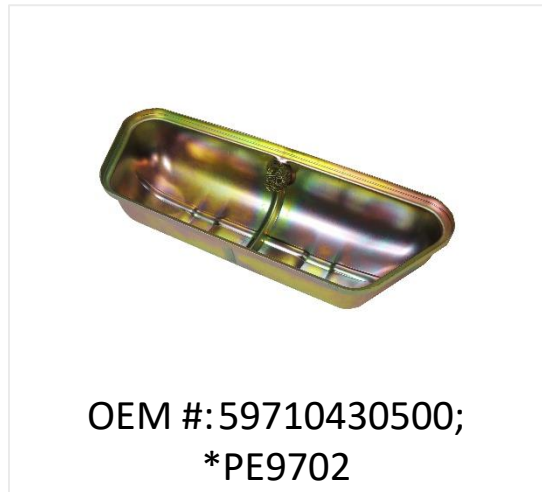

1964-1965 Porsche 356C  
356SC Front Caliper  
Hardware Kit



1964-1965 Porsche 356C  
356SC Rear Caliper  
Hardware Kit



1960-1965 Porsche 356B 356C  
Generator Wiring Harness



1950-1965 Porsche 356  
Stainless Steel Protective  
Push Rod Tube



1955-1965 Porsche 356A 356B  
356C Coupe Window  
Regulator Right Side



1955-1965 Porsche 356A 356B  
356C Coupe Window  
Regulator Left Side



1959-1965 Porsche 356A 356B  
356C Cabriolet Window  
Regulator Right Side



1959-1965 Porsche 356A 356B  
356C Cabriolet Window  
Regulator Left Side



1950-1965 Porsche 356  
Engine Oil Cooler



# Porsche 356 PRE-A (50-55)

1950-1955 Porsche 356 Pre-A  
Front Bonnet Lock Upper



1950-1955 Porsche 356 Pre-A  
Front Trunk Latch



1950-1955 Porsche 356 Pre-A  
Headlight CLEAR Lens Replaces



1950-1955 Porsche 356 Pre-A  
Headlight Amber Lens  
Replaces



1950-1955 Porsche 356 Pre-A  
Front Hood Hinge LH=RH



1950-1955 Porsche 356 Pre-A  
Jack Stand Storage Receiver  
Clip



1950-1955 Porsche 356Pre A  
Rear Spring Plate Bushing  
LH=RH



1950-1955 Porsche 356 Pre-A  
Aero Mirror with Convex glass



1950-1955 Porsche 356 Pre A  
Floor Rear Wall Cover or  
Access Cover



1950-1955 Porsche 356 Pre-A  
Front Turn Signal Indicator  
Light Clear Lens



# Porsche 356 PRE-A (50-55)

1950-1955 Porsche 356 Pre-A  
Taillight Indicator Light Amber  
Lens



OEM #: 64463100800;  
\*PE8604

1952-1955 Porsche 356 Pre-A  
Front Bumper wo holes One  
Piece Stamped



OEM #:64450501100;  
\*PS5811

1952-1955 Porsche 356 Pre-A  
Front Bumper w/ holes One  
Piece Stamped



OEM #:64450501100;  
\*PS5813

1952-1955 Porsche 356 Pre-A  
Rear Bumper wo One Piece  
Stamped



OEM #:64450502100;  
\*PS7811

1952-1955 Porsche 356 Pre-A  
Rear Bumper w/ One Piece  
Stamped



OEM #:64450502100;  
\*PS7812

# Porsche 356A (56-59)

1956-1959 Porsche 356 356A  
Front Bonnet Lock Upper



1956-1959 Porsche 356A Front  
Trunk Latch



1956-1959 Porsche 356A  
Headlight CLEAR Lens Replaces




1956-1959 Porsche 356A  
Headlight Amber Lens  
Replaces



1959-1959 Porsche 356A Front  
Hood Hinge LH=RH



1956-1959 Porsche 356A Jack  
Stand Storage Receiver Clip

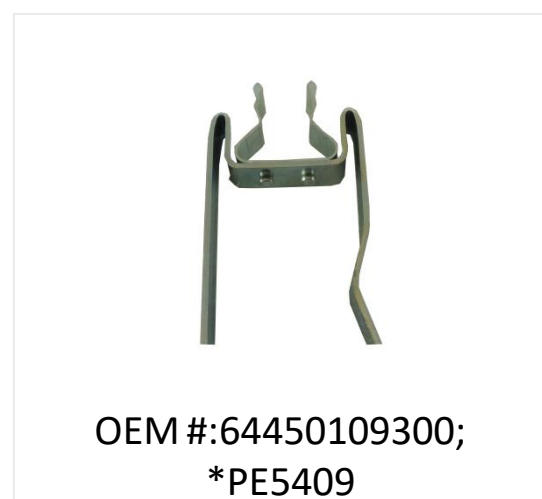

1956-1959 Porsche 356A  
Speedster INTERIOR REAR  
VIEW MIRROR



1956-1959 Porsche 356A  
Aero Mirror with Convex glass



1958-1959 Porsche 356A  
Talbot-Berlin Mirror



1956-1959 Porsche 356A  
Single Grille Coupe Engine  
Decklid



# Porsche 356A (55-59)

1956-1959 Porsche 356A Floor  
Rear Wall Cover or Access  
Cover



OEM #: 64450452110;  
\*PE7101

1956-1959 Porsche 356A  
Convex Chrome Mirror RH  
(Lucas Style)



OEM #: JH311R;  
\*PE6906

1956-1959 Porsche 356A  
Convex Chrome Mirror LH  
(Lucas Style)



OEM #: JH311L;  
\*PE6906

1956-1959 Porsche 356A Door  
Shell Skin RH



OEM #: PCG53100426GRV;  
\*PS6705

1956-1959 Porsche 356A Door  
Shell Skin LH



OEM #: PCG53100326GRV;  
\*PS6706

1952-1955 Porsche 356 Pre-A  
Front Bumper wo holes One  
Piece Stamped



OEM #: 64450501100;  
\*PS5811

1952-1955 Porsche 356 Pre-A  
Front Bumper w/ holes One  
Piece Stamped



OEM #: 64450501100;  
\*PS5813

1952-1955 Porsche 356 Pre-A  
Rear Bumper wo One Piece  
Stamped



OEM #: 64450502100;  
\*PS7811

1952-1955 Porsche 356 Pre-A  
Rear Bumper w/ One Piece  
Stamped



OEM #: 64450502100;  
\*PS7812



# Porsche 356A (56-59)

1956-1959 Porsche 356A Rear  
Wheel Cylinder 19.05mm  
LH=RH



OEM #: 64435251301;  
\*PE3414

1956-1959 Porsche 356A Front  
Upper Right Wheel Cylinder  
19.05mm



OEM #: 69535151200;  
\*PE3415

1956-1959 Porsche 356A  
Front Upper Left Wheel  
Cylinder 19.05mm



OEM #: 69535151100;  
\*PE3416

1956-1959 Porsche 356A Front  
Turn Signal Indicator Light  
Clear Lens



OEM #: 64463100900;  
\*PE8603

1956-1959 Porsche 356A  
Taillight Indicator Light Amber  
Lens



OEM #: 64463100800;  
\*PE8604

1956-1959 Porsche 356A  
Headlight Assembly Slopping  
Style with Clear Lens



OEM #: 66463110107;  
\*PS8510

1956-1959 Porsche 356A  
Headlight Assembly Slopping  
Style with Amber Lens




OEM #: 66463110107;  
\*PS8511

1956-1959 Porsche 356A  
Headlight Assembly Flat Style  
with Clear Lens



OEM #: 66463110107;  
\*PS8515

1956-1959 Porsche 356A  
Headlight Assembly Flat Style  
with Amber Lens

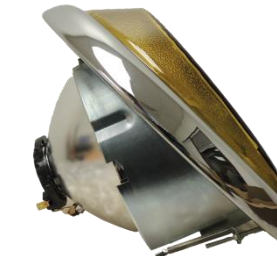

OEM #: 66463110107;  
\*PS8516

1956-1959 Porsche 356A Rear  
Spring Plate Bushing LH=RH



OEM #: 64433313100;  
\*PE8351

# Porsche 356BT5 (60-61)

1960-1961 Porsche 356BT5  
Jack Stand Storage Receiver  
Clip




1960-1961 Porsche 356BT5  
Front Trunk Latch



1960-1961 Porsche 356BT5  
Headlight CLEAR Lens Replaces



1960-1961 Porsche 356BT5  
Headlight Amber Lens  
Replaces

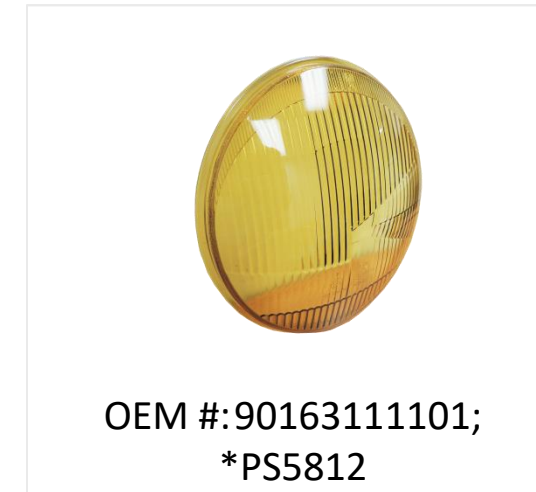

1960-1961 Porsche 356BT5  
Front Hood Hinge LH=RH



1960-1961 Porsche 356BT5  
Aero Mirror with Convex glass



1960-1961 Porsche 356BT5  
Talbot-Berlin Mirror



1960-1961 Porsche 356BT5  
Single Grille Coupe Engine  
Decklid



1960-1961 Porsche 356BT5  
Upper Oil Pump Gear



1960-1961 Porsche 356BT5  
Lower Oil Pump Gear



# Porsche 356BT5 (60-61)

1960-1961 Porsche 356BT5  
Floor Rear Wall Cover or  
Access Cover



OEM #: 64450452110;  
\*PE7101

1960-1961 Porsche 356BT5  
Convex Chrome Mirror RH  
(Lucas Style)



OEM #: JH311R;  
\*PE6906

1960-1961 Porsche 356BT5  
Convex Chrome Mirror LH  
(Lucas Style)



OEM #: JH311L;  
\*PE6906

1960-1961 Porsche 356BT5  
Door Shell Skin RH



OEM #: PCG53100426GRV;  
\*PS6705

1960-1961 Porsche 356BT5  
Door Shell Skin LH



OEM #: PCG53100326GRV;  
\*PS6706

1960-1961 Porsche 356BT5  
Metal Hood; 1mm thick



OEM #: 64451101006GRV;  
\*PS5307

1960-1961 Porsche 356BT5  
Alumi Hood; 1mm thick



OEM #: 64451101006GRV;  
\*PS5317

1960-1961 Porsche 356BT5  
Engine Cover Hood w/Louvers



OEM #: 64451200106;  
\*PS8101

1960-1961 Porsche 356BT5  
Door Hinge Upper Right=Lower  
Left



OEM #: 64453103204;  
\*PE6719

1960-1961 Porsche 356BT5  
Door Hinge Upper Left=Lower  
Right



OEM #: 64453103104;  
\*PE6720

# Porsche 356BT5 (60-61)

1960-1961 Porsche 356BT5  
Headlight Assembly Slopping  
Style with Clear Lens



OEM #: 66463110107;  
\*PS8510

1960-1961 Porsche 356BT5  
Headlight Assembly Slopping  
Style with Amber Lens



OEM #: 66463110107;  
\*PS8511

1960-1961 Porsche 356BT5  
Headlight Assembly Flat Style  
with Clear Lens



OEM #: 66463110107; \*PS8515

1960-1961 Porsche 356BT5  
Headlight Assembly Flat Style  
with Amber Lens



OEM #: 66463110107; \*PS8516

# Porsche 356BT6 (62-63)

1962-1963 Porsche 356BT6  
Steering Box Access Panel



1962-1963 Porsche 356BT6  
Rear Wheel Cylinder 19.05mm  
LH=RH



1962-1963 Porsche 356BT6  
Front Upper Right Wheel  
Cylinder 19.05mm




1962-1963 Porsche 356BT6  
Front Upper Left Wheel  
Cylinder 19.05mm



1962-1963 Porsche 356BT6  
Rear Spring Plate Bushing  
LH=RH



1962-1963 Porsche 356BT6  
Jack Stand Storage Receiver  
Clip

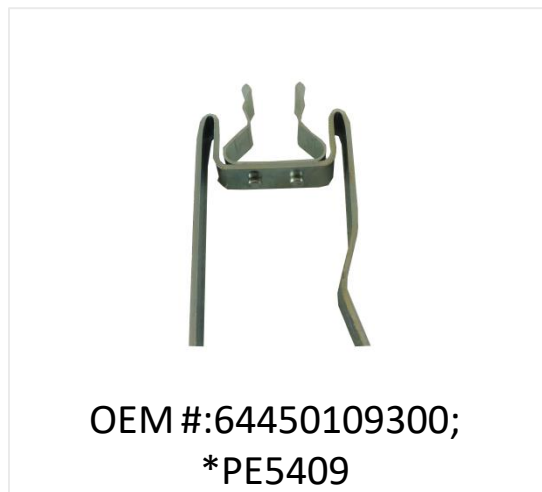

1962-1963 Porsche 356BT6  
Front Trunk Latch



1962-1963 Porsche 356BT6  
Headlight CLEAR Lens Replaces



1962-1963 Porsche 356BT6  
Headlight Amber Lens  
Replaces



1962-1963 Porsche 356BT6  
Front Hood Hinge LH=RH



# Porsche 356BT6 (62-63)

1960-1961 Porsche 356BT5  
Floor Rear Wall Cover or  
Access Cover



OEM #: 64450452110;  
\*PE7101

1960-1961 Porsche 356BT5  
Convex Chrome Mirror RH  
(Lucas Style)



OEM #: JH311R;  
\*PE6906

1960-1961 Porsche 356BT5  
Convex Chrome Mirror LH  
(Lucas Style)



OEM #: JH311L;  
\*PE6906

1960-1961 Porsche 356BT5  
Door Shell Skin RH



OEM #: PCG53100426GRV;  
\*PS6705

1960-1961 Porsche 356BT5  
Door Shell Skin LH



OEM #: PCG53100326GRV;  
\*PS6706

1960-1961 Porsche 356BT5  
Metal Hood; 1mm thick



OEM #: 64451101006GRV;  
\*PS5307

1960-1961 Porsche 356BT5  
Alumi Hood; 1mm thick




OEM #: 64451101006GRV;  
\*PS5317

1960-1961 Porsche 356BT5  
Engine Cover Hood w/Louvers



OEM #: 64451200106;  
\*PS8101

1960-1961 Porsche 356BT5  
Door Hinge Upper Right=Lower  
Left

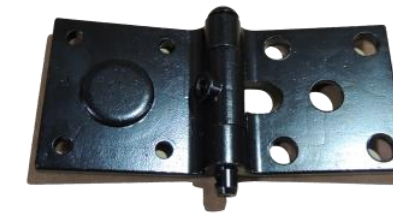

OEM #: 64453103204;  
\*PE6719

1960-1961 Porsche 356BT5  
Door Hinge Upper Left=Lower  
Right



OEM #: 64453103104;  
\*PE6720

# Porsche 356BT6 (62-63)

1960-1961 Porsche 356BT5  
Headlight Assembly Slopping  
Style with Clear Lens



1960-1961 Porsche 356BT5  
Headlight Assembly Slopping  
Style with Amber Lens



1960-1961 Porsche 356BT5  
Headlight Assembly Flat Style  
with Clear Lens



1960-1961 Porsche 356BT5  
Headlight Assembly Flat Style  
with Amber Lens



1962-1963 Porsche 356BT6  
Upper Oil Pump Gear



1962-1963 Porsche 356BT6  
Lower Oil Pump Gear



# Porsche 356C (64-65)

1964-1965 Porsche 356C  
Brake Master Cylinder  
19.05mm



OEM #: 69535501100;  
\*PE3412

1964-1965 Porsche 356C Rear  
View Interior Mirror Day-  
Night w/ Break Away Mount



OEM #: 64473110106;  
\*PE6902

1964-1965 Porsche 356C  
Headlight CLEAR Lens Replaces



OEM #: 90163111100;  
\*PE5812

1964-1965 Porsche 356C  
Headlight Amber Lens  
Replaces



OEM #: 90163111101;  
\*PS5812

1964-1965 Porsche 356C Rear  
Spring Plate Bushing LH=RH



OEM #: 64433313100;  
\*PE8351

1964-1965 Porsche 356C  
Steering Box Access Panel



OEM #: 64450450101;  
\*PS8888

1964-1965 Porsche 356C  
5/130; 4 1/2" X 15" ; ET42  
**Painted** Steel Wheel



OEM #: 90136101303;  
\*PESW01

1964-1965 Porsche 356C  
5/130; 5 1/2" X 15" ; ET42  
**Painted** Steel Wheel



OEM #: 91136102200;  
\*PESW02

1964-1965 Porsche 356C  
5/130; 4 1/2" X 15" ; ET42  
**Chrome** Steel Wheel



OEM #: 90136101323;  
\*PESW03

1964-1965 Porsche 356C  
5/130; 5 1/2" X 15" ; ET42  
**Chrome** Steel Wheel



OEM #: 91136102220;  
\*PESW04



# Porsche 356C (64-65)

1964-1965 Porsche 356C  
Headlight Assembly Slopping  
Style with Clear Lens



OEM #: 66463110107;  
\*PS8510

1964-1965 Porsche 356C  
Headlight Assembly Slopping  
Style with Amber Lens



OEM #: 66463110107;  
\*PS8511

1964-1965 Porsche 356C  
Headlight Assembly Flat Style  
with Clear Lens




OEM #: 66463110107;  
\*PS8515

1964-1965 Porsche 356C  
Headlight Assembly Flat Style  
with Amber Lens



OEM #: 66463110107;  
\*PS8516

1964-1965 Porsche 356C Door  
Hinge Upper Left=Lower Right

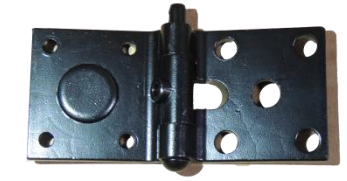


OEM #: 64453103104;  
\*PE6720

1964-1965 Porsche 356C Door  
Hinge Upper Right=Lower Left



OEM #: 64453103204;  
\*PE6719

1964-1965 Porsche 356C  
Front Brake Caliper Right Side

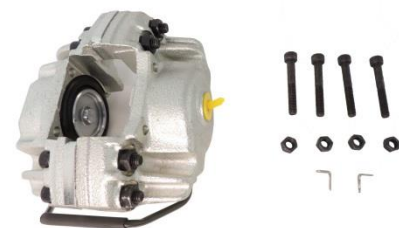

OEM #: 90135196610;  
\*PE3405

1964-1965 Porsche 356C  
Front Brake Caliper Left Side



OEM #: 90135196510;  
\*PE3406

1964-1965 Porsche 356C Rear  
Brake Caliper Right Side



OEM #: 90135296610;  
\*PE3407

1964-1965 Porsche 356C Rear  
Brake Caliper Left Side



OEM #: 90135296510;  
\*PE3408

# Porsche 356C (64-65)

1964-1965 Porsche 356C  
Engine Cover Hood w/Louvers



OEM #: 64451200106; \*PS8101

1964-1965 Porsche 356C  
Convex Chrome Mirror RH  
(Lucas Style)



OEM #: JH311R;  
\*PE6906

1964-1965 Porsche 356C  
Convex Chrome Mirror LH  
(Lucas Style)



OEM #: JH311L;  
\*PE6906

1960-1961 Porsche 356BT5  
Door Shell Skin RH



OEM #: PCG53100426GRV;  
\*PS6705

1960-1961 Porsche 356BT5  
Door Shell Skin LH



OEM #: PCG53100326GRV;  
\*PS6706

1964-1965 Porsche 356C  
Alumi Hood; 1mm thick



OEM #: 64451101007GRV;  
\*PS5309

1964-1965 Porsche 356C  
Metal Hood; 1mm thick



OEM #: 64451101007GRV;  
\*PS5308

1964-1965 Porsche 356C  
Front Hood Hinge LH=RH



OEM #: 64451103100;  
\*PE5404

1964-1965 Porsche 356C Jack  
Stand Storage Receiver Clip



OEM #: 64450109300;  
\*PE5409

Stay in touch with us!

Email : [info@showmeclassicparts.com](mailto:info@showmeclassicparts.com)